


TXX-38B(or C) Servo Control P.C. Board Ass'y

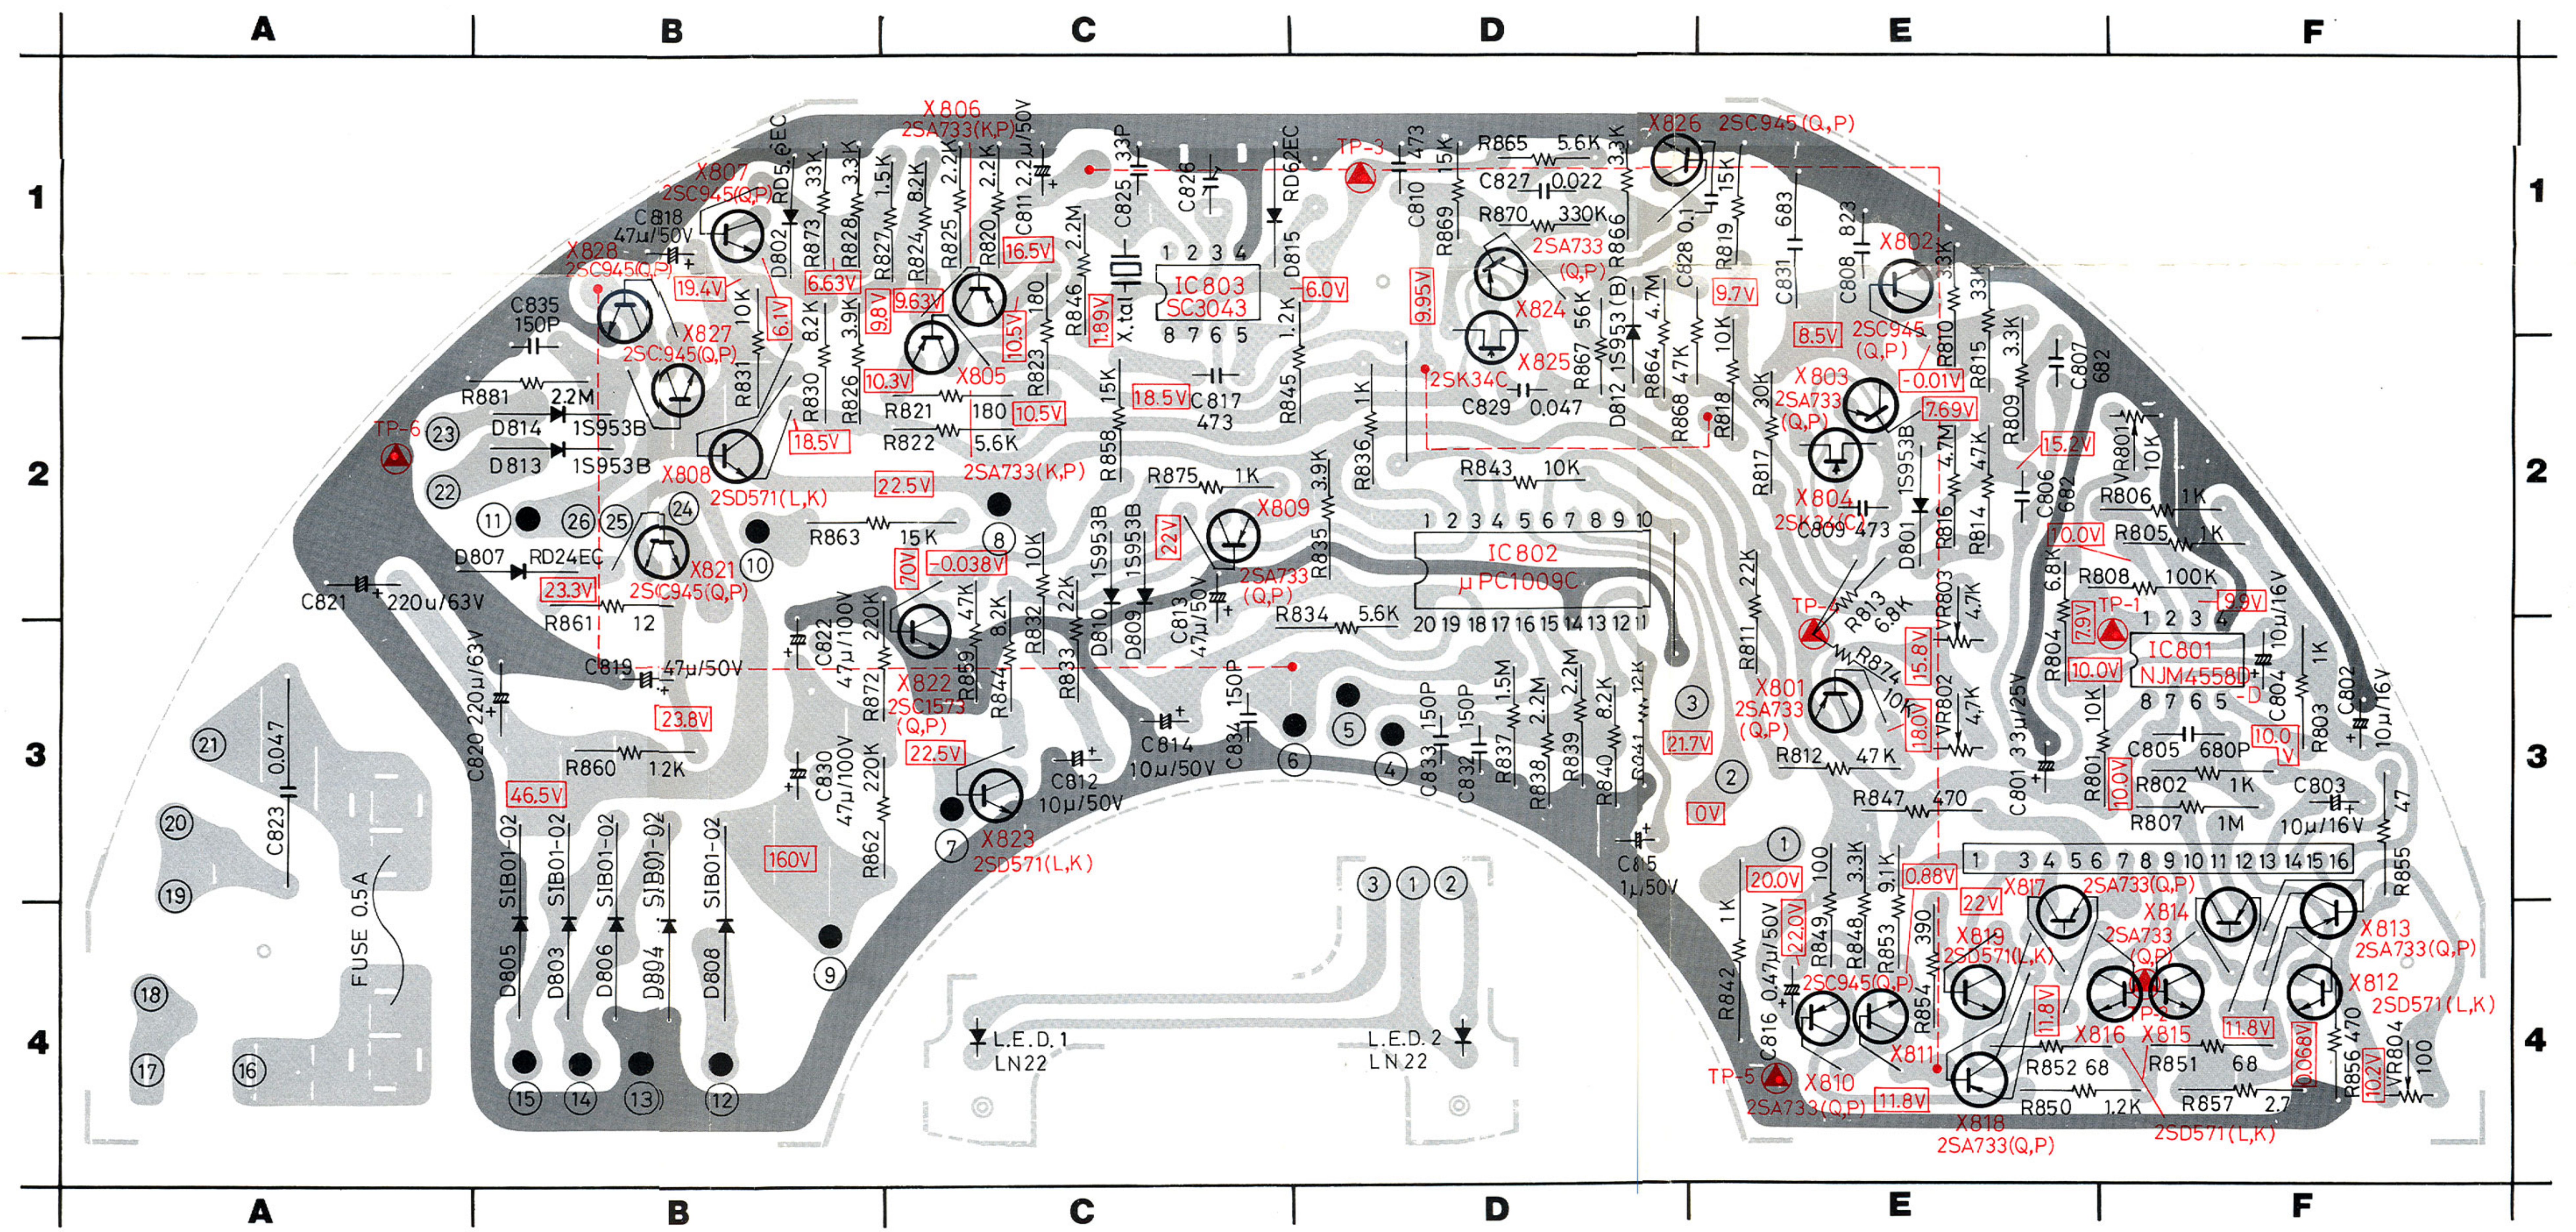

Note : This assembly varies according to the area where the unit is sold.

For U.S.A. & Canada	For Europe	For U.K.	For Australia	For U.S. Military Market & Other Countries
TXX-38B	TXX-38C	TXX-38C	TXX-38C	TXX-38C

When a motor cannot be repaired and must be replaced, it is recommended that the motor and motor circuit board (TXX-38B or C) be replaced at the same time. Hall element current adjustment is required for replacement of the motor or motor circuit board only is performed. Refer to the "7-(3) Balance adjustment of drive circuit".

- Notes:
1. Voltage values in   are measured with a tester (impedance 20 kΩ/V) without a signal applied to the unit.
  2.  indicates ground.  
 indicates the others.